



Continuous Shooting

Pictures can be taken continuously while the shutter release button is kept pressed.

The following two types of Continuous Shooting are available.



| | |
|--|---|
|  Continuous Shooting (Hi) | For JPEG image with $\frac{1}{16M}/\star\star\star$, up to approx. 30 frames are taken continuously at a maximum of approx. 7.0 fps. |
|  Continuous Shooting (Lo) | For JPEG image with $\frac{1}{16M}/\star\star\star$, pictures are taken continuously at a maximum of approx. 1.6 fps until the SD Memory Card is full. |


 When the file format is [RAW] (PEF), up to approx. 20 frames for  and up to approx. 40 frames for  can be taken continuously.

1 Press the four-way controller (\blacktriangle) in Capture mode.

The [Drive Mode] screen appears.

2 Use the four-way controller ($\blacktriangleleft \blacktriangleright$) to select .

3 Press the four-way controller (\blacktriangledown) and use the four-way controller ($\blacktriangleleft \blacktriangleright$) to select  or .

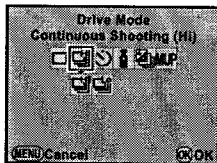

4 Press the OK button.

The camera is ready to take a picture.