
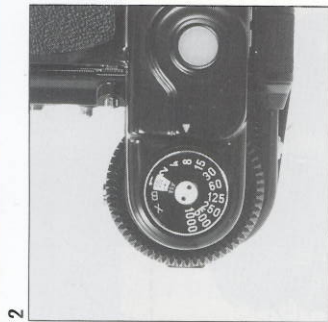


レンズシャッターで使うとき LEAF SHUTTER MODE

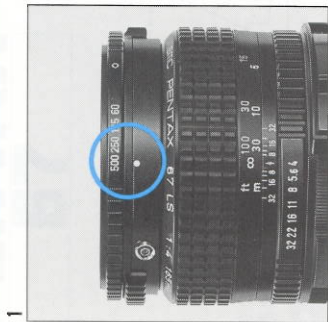

レンズシャッターとフォーカルプレーンシャッターを連動させて使用します。

1. シャッタースピードリングを回して、希望のシャッタースピードを●〔白点〕指標に合わせ、絞り値もセットします。
2. ボディー側のシャッタースピードを1/8秒にセットします。〔1/15秒以上の速いスピードでは、レンズシャッターが同調しません。〕
3. レンズシャッターがセットされていないとフアインダー像は見られません。
シャッターレバーを矢印の方向へ回して、レンズシャッターをセットします。
〔セット後、シャッタースピードや絞りを変更することもできます。〕

※ 巻上げレバーを巻上げ、ピントを合わせて撮影します。次の撮影をするときは、必ずレンズシャッターを再セットしてから撮影してください。

The leaf shutter mode is a coupled function with the camera's focal plane shutter.

1. Align the shutter speed you desire to the white-dot index by turning the shutter speed ring. Set the aperture as well.
 2. Set the camera's shutter to 1/8 sec. A shutter speed faster than 1/8 sec will not synchronize with the leaf shutter.
 3. Unless the leaf shutter is cocked it is impossible to see anything through the viewfinder. The leaf shutter may be cocked by rotating the shutter cocking lever in the direction of the arrow. (After setting the shutter cocking lever, it is still feasible to reset both the shutter speed and aperture.)
- Before cocking the camera's wind lever always ensure to cock the leaf shutter.

ご注意

- レンズシャッターをセットしていないと、シャッターをきってもレンズシャッターは開かず、フォーカルプレーンシャッターだけけるので未露光になります。
- レンズシャッターで使用時は、カメラのミラーアップ機構は使えません。
- 67用アクセサリーの接写リングやリアコンバーターなどを使うときは、レンズシャッターは使用できません。
- ボディー側のXシンクロソケットに、シンクロコードを接続して、レンズシャッターでのストロボ撮影はできません。

Cautions

- Even if the shutter button is depressed, unless the leaf shutter is set, it cannot be released and only the camera's focal plane shutter is released. Consequently the picture will not be exposed.
- If the mirror is locked up, the leaf shutter cannot be used.
- When using this lens with the 67 accessories such as Extension Tubes, Rear Converters, etc., the leaf shutter cannot be used.
- In the leaf shutter mode, with the flash's sync cord connected to the camera's X-sync socket, flash photos are impossible.