

10. Slide LED display out of focus
11. Lift out complete flex circuit (glued to top of pentaprism)
12. Unsolder 5 leads from front-plate
13. Unsolder green wire and blue wire
14. Rewind-side leatherette; peel enough to reach front plate
15. Cock shutter
16. Screw at top rear of mirror box
17. 4 front-plate screws
18. Front-plate/mirror-box assembly
19. Winding-seat assembly (3 screws)
20. Shutter assembly (3 screws)

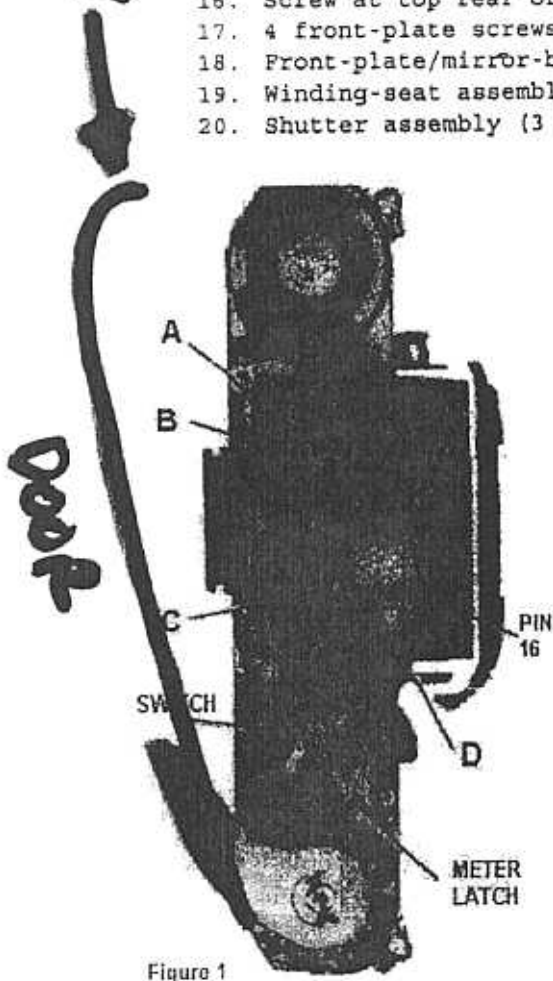


Figure 1

REASSEMBLY HIGHLIGHTS: